

Programming Interface for Smartcard Readers

Installation and User Manual

1. Introduction

The Rosslare's MD-08B MIFARE® Reader Programmer is used to set the Wiegand output format of MIFARE read-only readers, while setting the input control of the reader to either buzzer or LED control.

Figure 1: MD-08B



2. Technical Specifications

Electrical Characteristics	
Operating Voltage	12 VDC
Input Current	500 mA
Cable	RS-232 serial cable
Data Specifications	
Reader	AY-M25, AY-W6350, AY-W6250, AY-K25, AY-H25, AY-Q6250, and AY-Q6350
Software Requirements	
Programmer Application	MIFARE Reader v0.05.00

3. Connections

3.1 Connecting the MD-08B to the Computer

Connect the MD-08B to a COM port in the computer using the RS-232 cable.

3.2 Connecting the Reader to the MD-08B

Connect the reader to the MD-08B according to the following wiring:

- Red to +12V
- Black to (-)
- Green to D0
- White to D1


 If the reader comes with a Molex connector, connect it to JP4.

4. Software Application

4.1 Starting the Software

1. Connect the reader to the MD-08B.
2. Run the MIFARE Reader Programmer application.
The *Mifare Reader Programmer* window opens (Figure 2):

Figure 2: The Mifare Reader Programmer

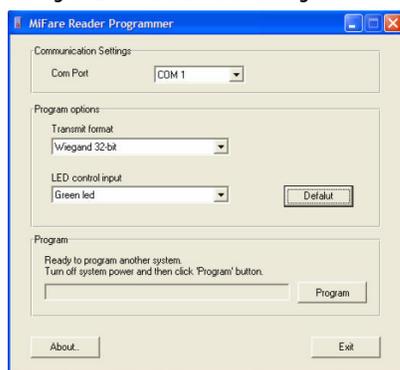


3. In Communication Settings, set **Com Port** to the port that the MD-08B is connected to.

4.2 Setting Rosslare Mifare® Reader's Transmission Format and LED Control Input

1. In Program options, set the parameters that you want to change in the reader. For example, you can set **Transmit format** to Wiegand 32-bit, and **LED control input** to Green LED.
2. Disconnect the MD-08B from the power.
3. Click the **Program** button to set the reader.
4. Reconnect the MD-08B to the power by connecting the Power plug.

If the programming was successful, the *Finish* window opens (Figure 3).

Figure 3: Finish Window

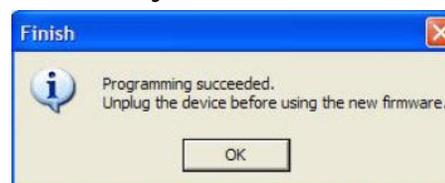

Limited Warranty

The full ROSSLARE Limited Warranty Statement is available in the Quick Links section on the ROSSLARE website at www.rosslaresecurity.com.
Rosslare considers any use of this product as agreement to the Warranty Terms even if you do not review them.

Contact Information

United States and Canada

Rosslare Security Products, Inc.
Southlake, TX, USA
Toll Free: +1-866-632-1101
Local: +1-817-305-0006
Fax: +1-817-305-0069
support.na@rosslaresecurity.com

Europe

Rosslare Israel Ltd.
Rosh HaAyin, Israel
Tel: +972-3-938-6838
Fax: +972-3-938-6830
support.eu@rosslaresecurity.com

Latin America

Rosslare Latin America
Buenos Aires, Argentina
Tel: +54-11-4001-3104
support.la@rosslaresecurity.com

China

Rosslare Electronics (Shenzhen) Ltd.
Shenzhen, China
Tel: +86-755-8610-6842
Fax: +86-755-8610-6101
support.cn@rosslaresecurity.com

Asia Pacific, Middle East, Africa

Rosslare Enterprises Ltd.
Kowloon Bay, Hong Kong
Tel: +852-2795-5630
Fax: +852-2795-1508
support.apac@rosslaresecurity.com

India

Rosslare Electronics India Pvt Ltd.
Tel/Fax: +91-20-40147830
Mobile: +91-9975768824
sales.in@rosslaresecurity.com

www.rosslaresecurity.com



EN ISO 13485



ROSSLARE
SECURITY PRODUCTS

0706-09601844+02