









# **Specification**


Model	Size(unit:mm)	Voltage	Current	Holding Force	Lock Signal	Door Signal	Time	Door
YM-350N	260Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10% 24V/250mA±10%	350kg(800Lbs)	NO	NO	No	Single Door
YM-350N(LED)	260Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10% 24V/250mA±10%	350kg(800Lbs)	NO/NC/COM	NO	No	Single Door
YM-350NT(LED)	260Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10% 24V/250mA±10%	350kg(800Lbs)	NO/NC/COM	NO	0/3/6/9sec.	Single Door
YM-350N(LED)-DS	260Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10% 24V/250mA±10%	350kg(800Lbs)	NO/NC/COM	NO/NC/COM	No	Single Door
YM-350ND	520Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10%x2 24V/250mA±10%x2	350kgx2(800Lbsx2)	NO	NO	No	Double Door
YM-350ND(LED)	520Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10%x2 24V/250mA±10%x2	350kgx2(800Lbsx2)	NO/NC/COM	NO	No	Double Door
YM-350NTD(LED)	520Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10%x2 24V/250mA±10%x2	350kgx2(800Lbsx2)	NO/NC/COM	NO	0/3/6/9sec.	Double Door
YM-350ND(LED)-DS	520Lx54.7Wx29.6H	DC12V(Default); DC24V(Order)	12V/500mA±10%x2 24V/250mA±10%x2	350kgx2(800Lbsx2)	NO/NC/COM	NO/NC/COM	No	Double Door

# Diagram(unit:mm)

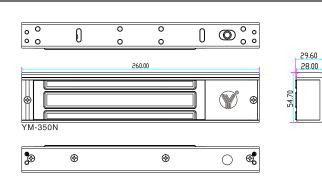

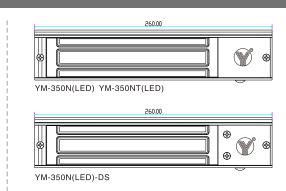





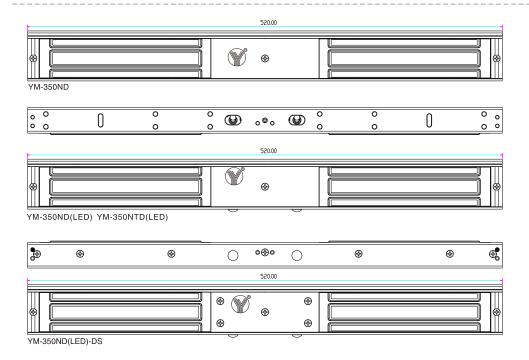




28.00

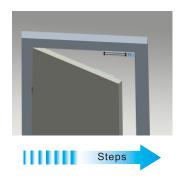


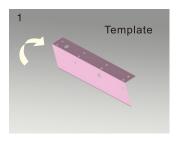


Fold the plate to  $90^{\circ}\,$  .

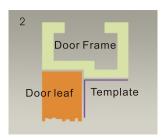


Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

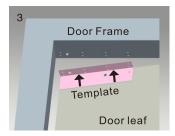


Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.

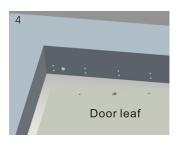


Drill holes based on the marked positions.

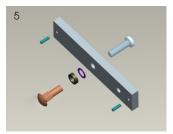


Make a combination based on the picture.

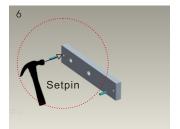

Strike the pin into the armature plate slightly (to avoid movement).

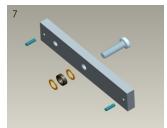


Make a combination based on the picture (add washer accordingly). The rubber ring must be added.

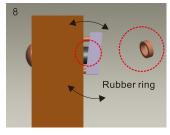


Place the rubber ring between armature plate and door leaf.




Use Allen key to remove the mounting plate from lock body.

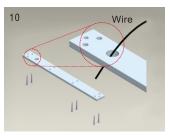

Fix the mounting plate on the door frame according to the holes drilled earlier.

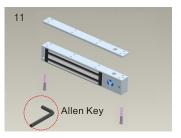


Use Allen key to screw the lock body on the mounting plate.

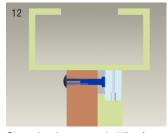


Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.




After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.

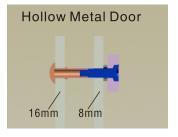

Drill a hole Inside: Diameter is 8mm Outside: Diameter is16mm

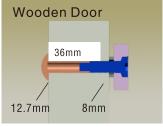

Drill a hole Inside: Diameter is 8mm Outside: Diameter is 12.7mm

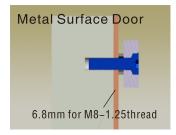

Inside:Drill a hole diameter is 8mm folding the plastic straight pin

## **M** Notice:

Thickness of Door Leaf:

350LBS: 44mm 600LBS: 50mm 800LBS: 48mm 1200LBS: 46mm

A. The screw of armature plate should not be fixed too tight. Proper elasticity should be guaranteed for

the rubber ring so that the armature plate can adjust itself to the appropriate position. B. Check the jumper's position before connecting. Figure out it represents 12VDC or 24VDC.

Different brackets are available according to different types of doors. For example, narrow door, frameless glass door and inward opening door.


#### L Bracket

When the door frame thickness is less than 42mm, L bracket is needed.





Single Door Magnetic Lock Bracket





Double Door Magnetic Lock Bracket

### **LC Bracket**

LC Bracket one-piece design, wires are mortised, no damage on wires





Single Door Magnetic Lock Bracket





### **ZL Bracket**

If install a bracket on inward opening door, ZL bracket is needed










**ZLC Bracket** 

Hidden-line Design of bracket for single door magnetic lock, one-piece design, durable, easy installation





Single Door Magnetic Lock Bracket





**GZ Bracket** 

 $Attention: \ No\ GZ\ bracket\ for\ 500kgs\ series\ available\ currently.$ 

 $One-piece\ design, durable \& professional\ design, easy\ installation, suitable\ for\ 10-15 mm\ frameless\ glass\ door and the professional\ design, easy\ installation, suitable\ for\ 10-15 mm\ frameless\ glass\ door and the professional\ design, easy\ installation, suitable\ for\ 10-15 mm\ frameless\ glass\ door and the professional\ design, easy\ installation, suitable\ for\ 10-15 mm\ frameless\ glass\ door\ frameless\ glass\ glass\ door\ frameless\ glass\ glass\$ 





Single Door Magnetic Lock Bracket






Double Door Magnetic Lock Bracket

### **U** Bracket

If door leaf is glass,need U bracket to be used with lock (suitable for 10-12mm glass door)  $\,$ 





Single Door Magnetic Lock Bracket

## **Installation of Armature Plate**

If door leaf is too thick, need to choose I bracket





Double Door Magnetic Lock Bracket

# **Circuit Board Diagram**

## A.12VDC Input:

Connect the positive(+)lead from a 12VDC power source to V +.

Connect the ground(-)lead from a 12VDC power source to V -.

Check jumper for 12 VDC operation.


## B.24VDC Input:

Connect the positive(+)lead from a 24VDC power source to V +.

Connect the ground(-)lead from a 24VDC power source to V -.


Check jumper for 24 VDC operation.

# Wiring Instruction of Single Door Magnetic Lock

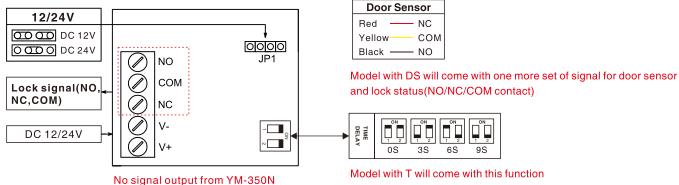


## Wiring Instruction of Double Door Magnetic Lock

**Connection**: green wire or white plug, except the models without LED indicator and signal output; only when it detects that double doors have been locked, there will be normal signal output.

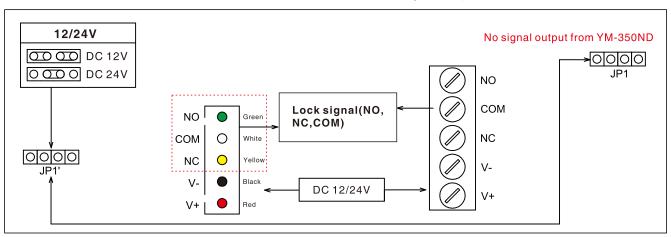

## Wire Connection

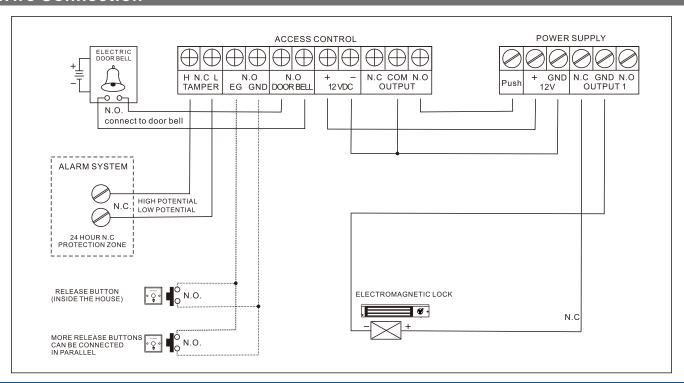

www.yli.cn We create security